



CABLE ASSEMBLY INSTRUCTIONS

RFD-4195MC-H1


CONNECTOR BODY

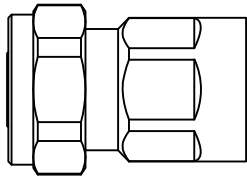


BACK NUT

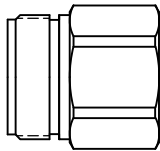

O-RING




TUBING

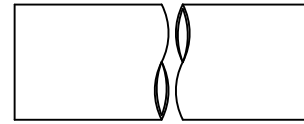


(NTS)


STEP 1

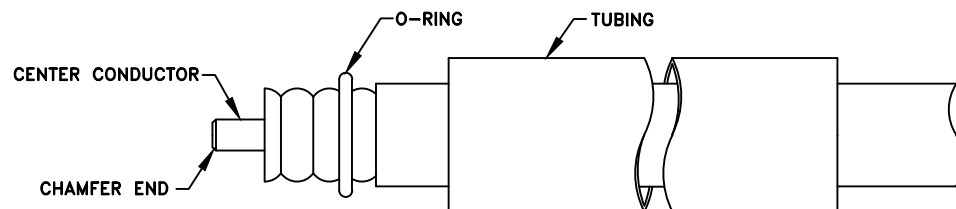


STEP 2

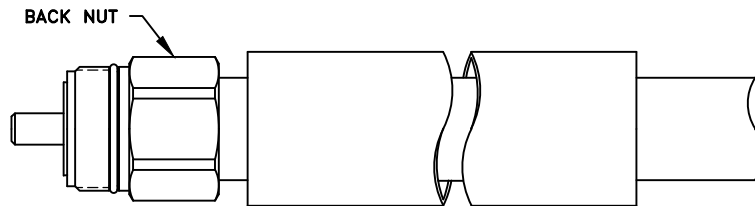

STEP 3

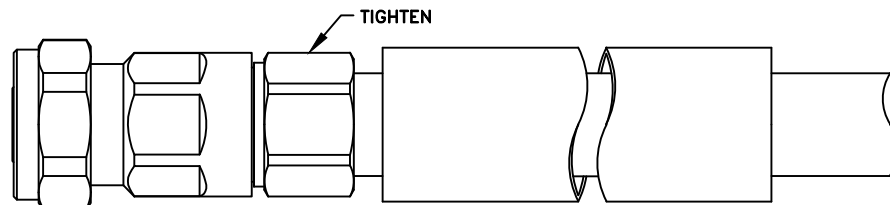

STEP 4

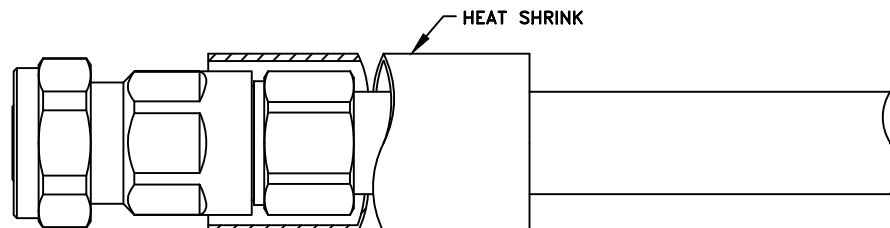

Step 1: Strip cable to dimensions shown in catalog or on outline drawing. All cuts are to be clean and square. Do not nick center conductor when cutting. Chamfer center conductor with a file to break sharp corners for smooth entry into rear contact. Place o-ring in place over coax cable as shown. Slide heat shrink tubing onto cable.

Step 2: Slide clamp nut onto cable. Deburr the outer conductor from in and outside edges.

Step 3: Insert cable assembly into connector body and tighten clamp nut while holding body stationary.

Step 4: Slide the tubing into place and heat shrink.

RFD-4195MC-H1 AP.DWG

RF CONNECTORS

08/29/16

7610 Miramar Road, San Diego, CA 92126-4202 - (858) 549-6340
(800) 233-1728 - Fax (858) 549-6345 E-mail: rfi@rfindustries.com - www.rfindustries.com

CZ